



# INSULATION BLANKET JACKETS

## MAINTENANCE AND OPERATION GUIDELINES


The valve is designed to operate **without** requiring the body bolts or packing gland bolts be re-tightened.

This valve will have higher than normal stem torque. Handles are designed for approximately 80 pounds of force (maximum) to rotate the valve.


**No** routine lubrication or maintenance is required on the valve.

Unless specifically stated, all Valvtechnologies products are designed for clockwise rotation to close and counter-clockwise to open.

**Caution:** Insulation must **not** be applied above the body flat.

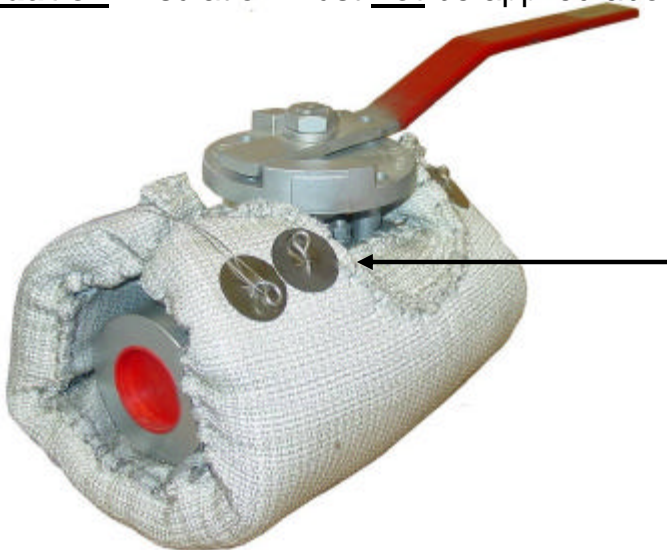

The easy to use metal clips allow the blanket to securely insulate the valve even after it has been removed and reused without damaging the surrounding pipe insulation.

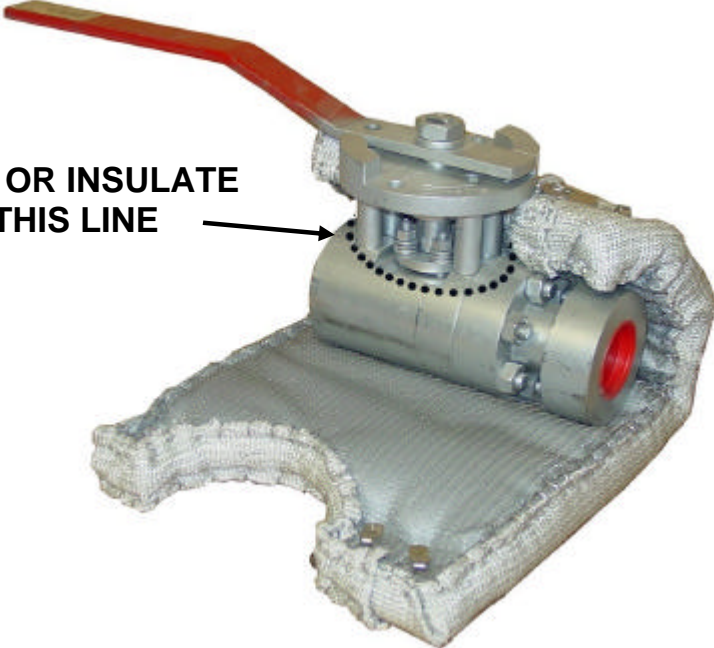

**DO NOT LAG OR INSULATE ABOVE THIS LINE**



**REMOVABLE & REUSABLE VALVE INSULATION BLANKET JACKETS**